USER'S MANUAL

MANUEL DE L'UTILISATEUR

MANUAL DEL USUARIO

DWM48F1Y1

TABLE OF CONTENTS

1	IMPORTANT INFORMATION		2
2	HOW TO INSTALL THE STAND		4
3	PREFACE		5
4	SAFETY PRECAUTIONS		5
5	CONTENTS		7
6	FRONT/BACK CONNECTIONS OF LCD TV		8
7	TV INSTALLATION	Power Cord Connection	9
		Antenna Connection	9
		AV Connection	10
		YPbPr(component) Connection	10
		VGA(PC)Connection	11
		USB Port Function	11
		HDMI&Coaxial&Auido out Connection	12
8	REMOTE CONTROL	Remote control instructions in TV mode	13
		Remote control setup	14
9	MENU OPERATION	Setup Wizard	15
		Select Input Source	17
		Basic Operation	17
		Picture Menu	18
		Sound Menu	21
		Time Menu	22
		Setup Menu	23
		Lock Menu	25
		Channel Menu	27
		Setup Menu	29
		USB Menu	30
10	TROUBLESHOOTING		32
11	SPECIFICATIONS		33

English

English

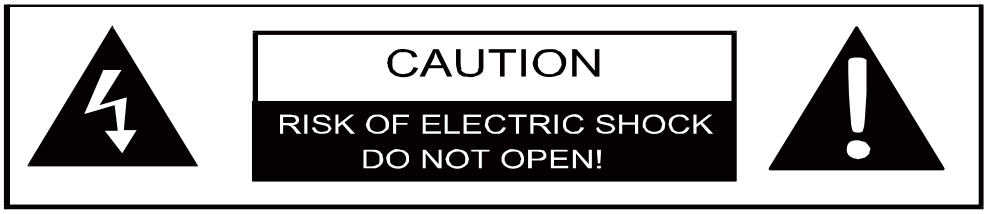

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction the literature accompanying the appliance.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
Refer to service manual for servicing instructions.

Important Safety Instructions

Note:

1.Read these instructions.
2.Keep these instructions.
3.Heed all warnings.
4.Follow all instructions.
5.Do not use near water.
6.Clean only with dry cloth.
7.Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8.Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9.Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10.Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11.Only use attachments / accessories specified by the manufacturer.

12.Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.

13.Unplug this apparatus during lightning storms or when unused for long periods of time.

14.Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15.Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

16.WARNING:To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

17.Mains plug or appliance coupler is used as the disconnect device, shall be readily operable.

18.The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.

19.WARNING:The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

20.The ON-MODE Power under Home Mode should be less than 78.8 W.

21.The Sleep Mode power should be less than 0.5 W.

22. ⧈ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

This Westinghouse product has earned the Energy Star® for meeting U.S. Federal energy efficiency guidelines as set by the Department of Energy and Environmental Protection agency. The Energy Star® program exists to provide energy saving guidelines and help promote energy efficient products and practices. Changes to certain features, settings and functions of this TV can change and/or increase its power consumption. Depending on how settings are changed, power consumption may exceed the limits required for Energy Star® qualification. This Westinghouse TV will operate at optimal energy efficiency in “Home” mode.

Licensing and Patent Information

This WESTINGHOUSE product may be covered by one or more U.S. and foreign patents and patent applications. See **http://westinghousedigital.com/compliance/** for details.

How to install the stand!

Follow instructions below to install the base of the TV, reverse the instructions to remove the base.

English

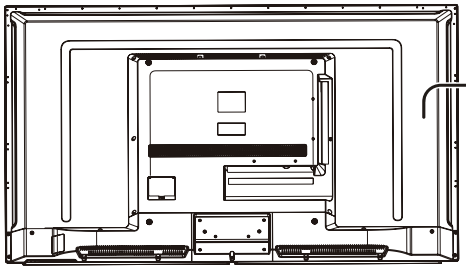

1 Lay the TV face-down on a flat, cushioned surface to avoid the screen from damage or scratches.

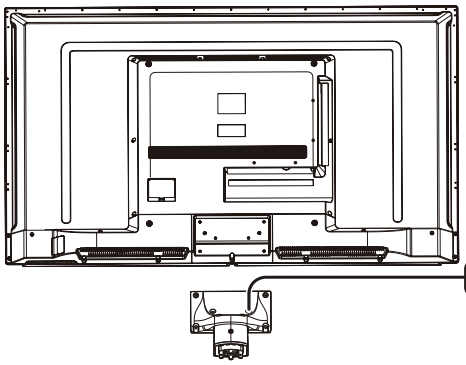

2 Fix the stand support to the TV using 6 pcs screws.

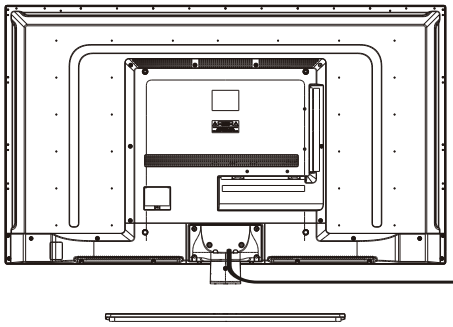

3 Fix the base stand to the TV using 6 pcs screws.

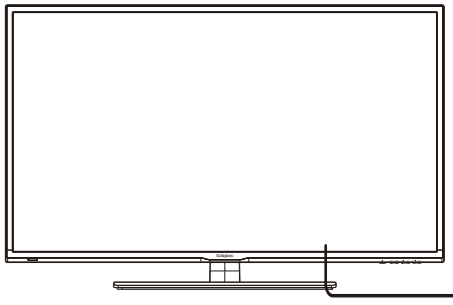

4 Complete Installation

3. PREFACE

Thank you for buying this TV! Please read this manual thoroughly before operating the TV. Make sure the TV was not damaged in transit. Should the TV be damaged, do not install it and contact your dealer. Check that you have all the accessories according to the model.

4. SAFETY PRECAUTIONS

Put the TV on a stable surface.

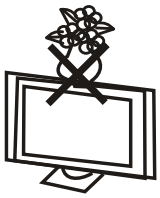

Do not place any material on the TV.

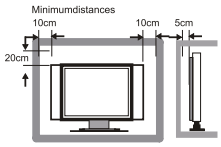

Do not use the TV with fixtures other than those provided or suggested by the manufacturer.

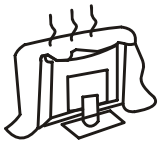

Do not block or cover the ventilation openings on the TV.
If you have a wall mount, check that it is steady.

Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the TV to fall.

Keep the TV dry and away from humidity.

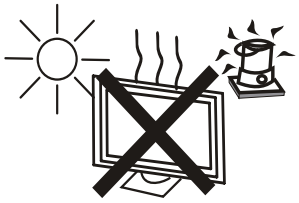

Keep the TV away from heat sources.

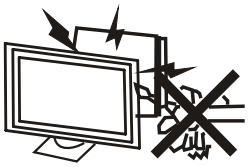

Unplug the TV before cleaning it. Do not use solvent or liquid to clean the TV.

Only clean the TV with a soft and dry cloth.

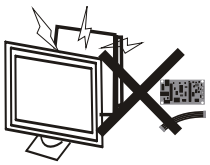

In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits, fire or other incidents.

Unplug the TV during lightning storms or when unused for long periods of time.

5. CONTENTS

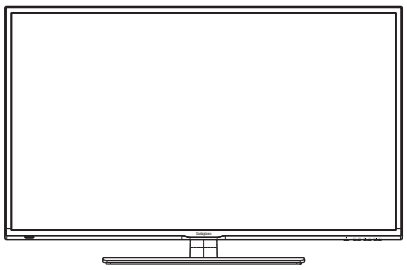

LED TV SET

Remote Control

USER'S MANUAL

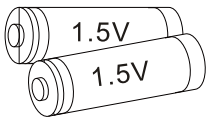

AAA Batteries

Warranty Card

Quick Connect Guide

FRONT/BACK CONNECTIONS OF LED TV

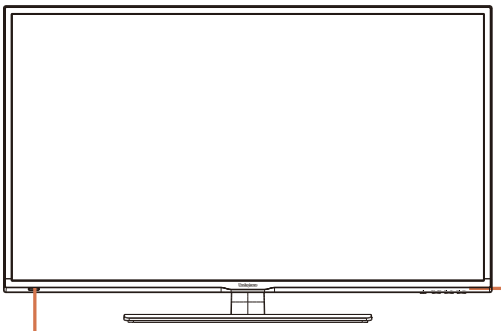

1. VOL+ Button
Press to adjust the volume up.
2. VOL- Button
Press to adjust the volume down.
3. CH+ Button
Press to change the TV channels and up highlight selections on the menu screen.
4. CH- Button
Press to change the TV channels and down highlight selections on the menu screen.
5.MENU Button
Press to display the on-screen TV menu.
6.INPUT Button
Press to select the input source of the TV.
7.POWER Button
Press to turn the unit on and off.

1.Standby Indicator
Indicates whether the unit is ON or in STANDBY (OFF) mode.
Light in red: The unit is in STANDBY.
Light in blue :The unit is turned ON.
2.Remote Sensor
Do not block this sensor or the remote control will not work.

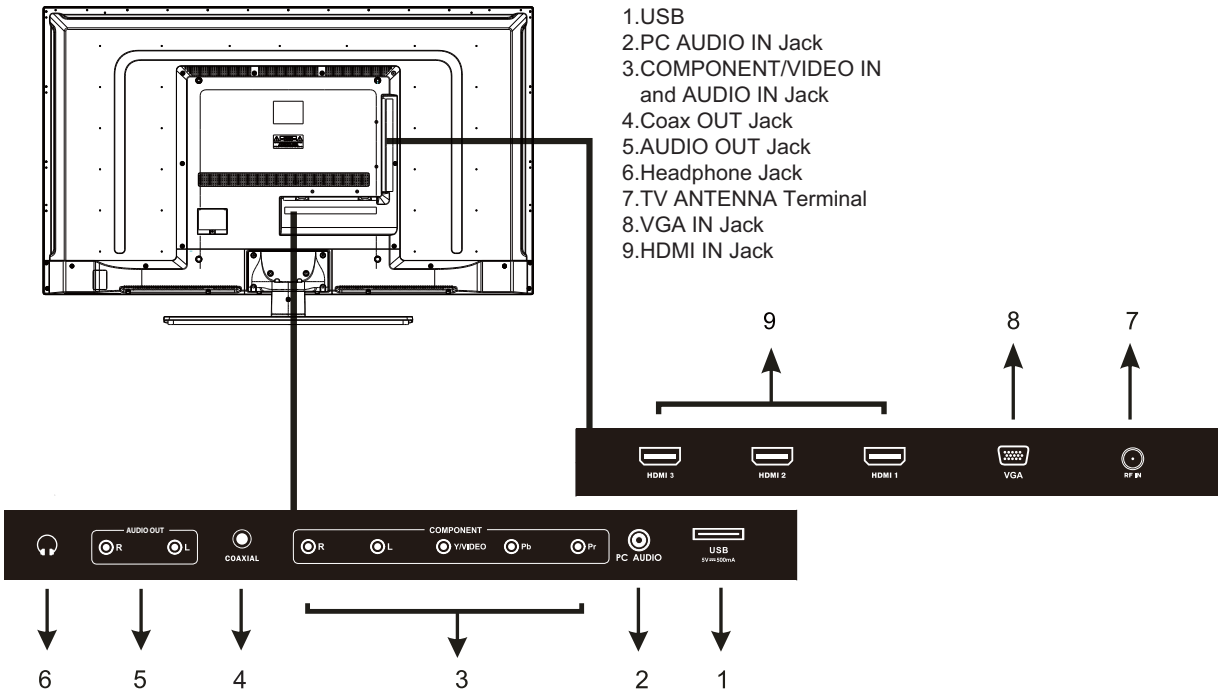

1.USB
2.PC AUDIO IN Jack
3.COMPONENT/VIDEO IN and AUDIO IN Jack
4.Coax OUT Jack
5.AUDIO OUT Jack
6.Headphone Jack
7.TV ANTENNA Terminal
8.VGA IN Jack
9.HDMI IN Jack

7. TV INSTALLATION

Power Cord Connection

- Connect the power cord correctly as shown.

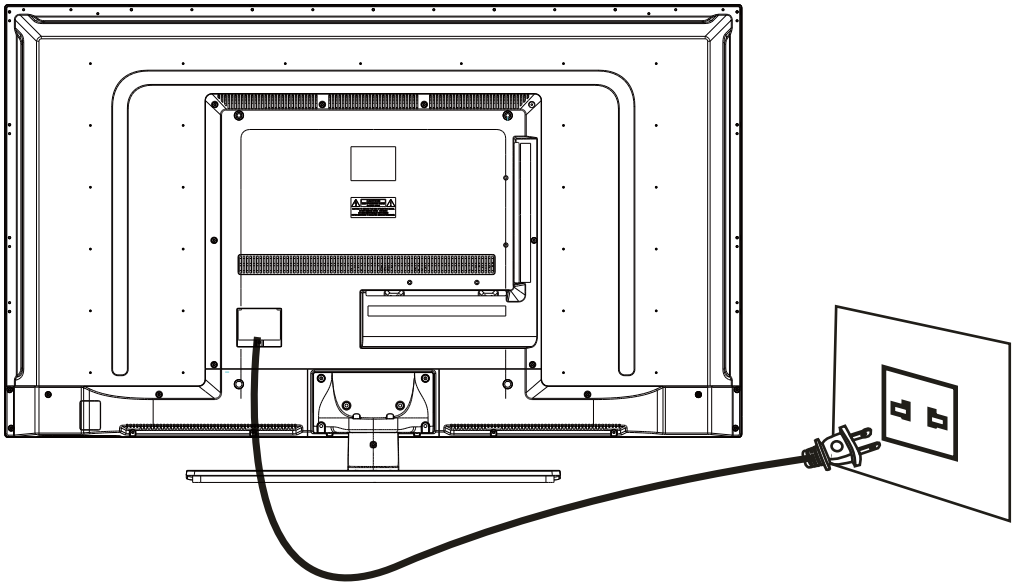

Antenna Connection

To ensure good picture and sound, TV antenna system needs to be installed. The antenna system as shown can be sourced from TV equipment shops, which will provide service for correct installation and connection. After installation, insert the 75-ohm antenna plug into the antenna jack as shown.

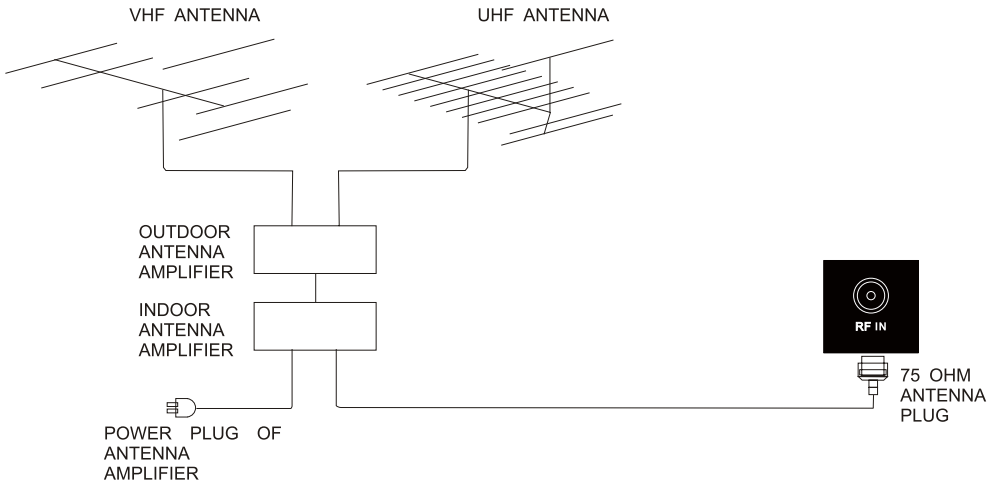

English

AV Connection

Connect the VIDEO and AUDIO output jack of the DVD or VCR to the VIDEO jacks on the set using the RCA cable. Match the jack colors: Video is yellow, Audio left is white,and Audio right is red.
Select the AV input source using the SOURCE button on the remote control.

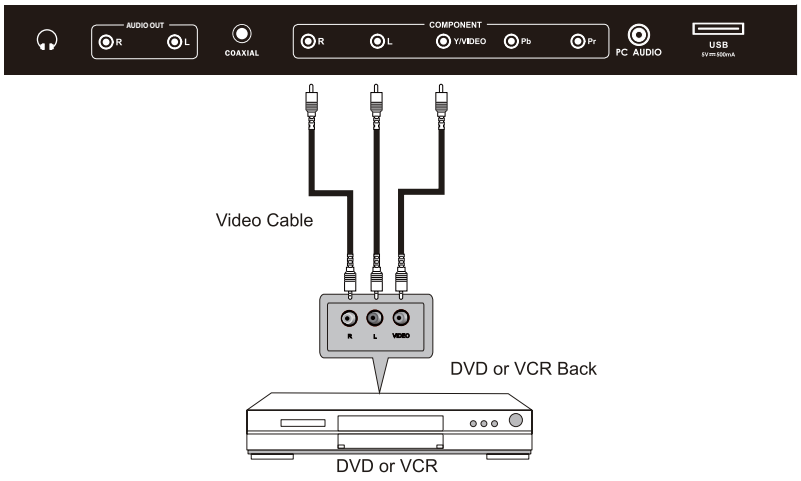

YPbPr (Component) Connection

Connect the YPbPr output of the DVD or VCR to the YPbPr input on the set. The picture quality is improved; compared to connecting a regular VCR to the video input. Connect the Audio output of the DVD or VCR to the Audio input jacks on the set using the RCA cable.
Match the jacks colors :Y is green,Pb is blue,Pr is red, Audio left is white,and Audio right is red.
Select component input source using the SOURCE button on the remote control.

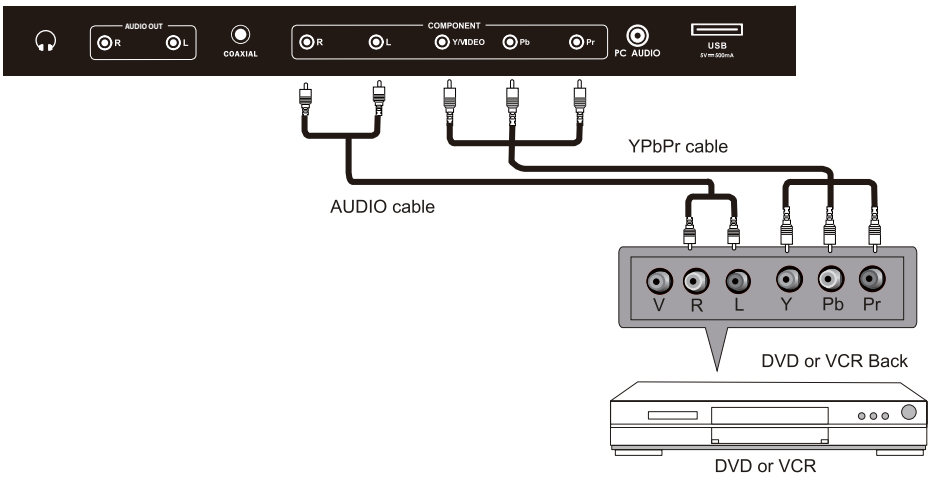

VGA(PC) Connection

Connect the RGB output of the PC to the VGA(PC) jack on the set. Connect the AUDIO output of The PC to the PC AUDIO jack on the set. Select the VGA input source with using SOURCE button on the remote control.

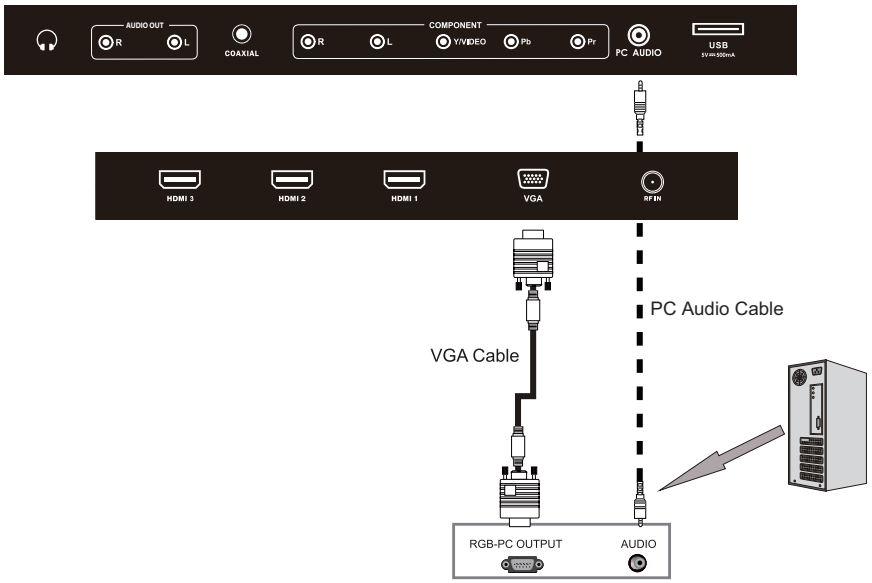

USB Port Function

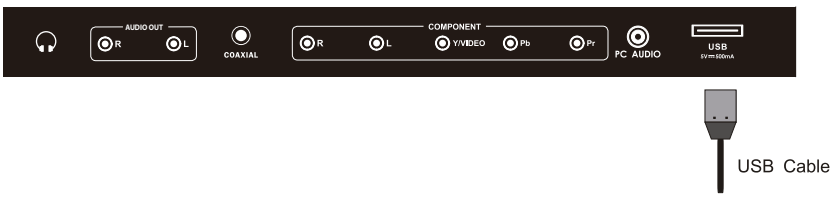

English

HDMI Connection

HDMI plug which replaces the HDMI connection allows transfer of all audio/video control signals through one cable only. These signals are transferred in digital.

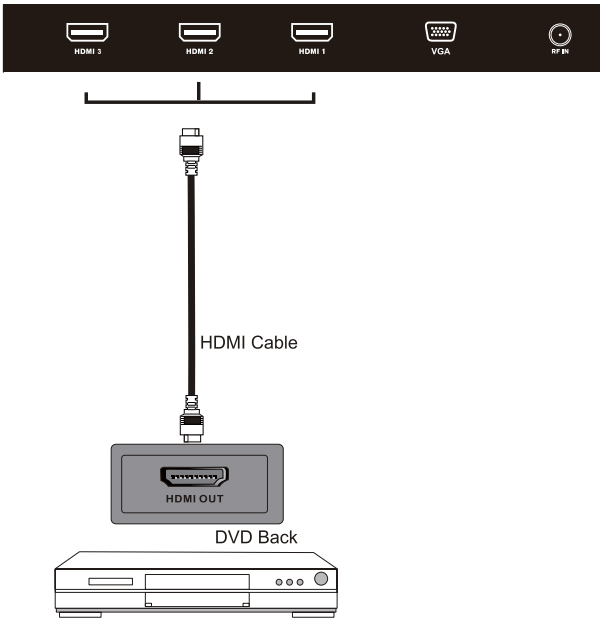

COAXIAL and AUDIO OUT Connection

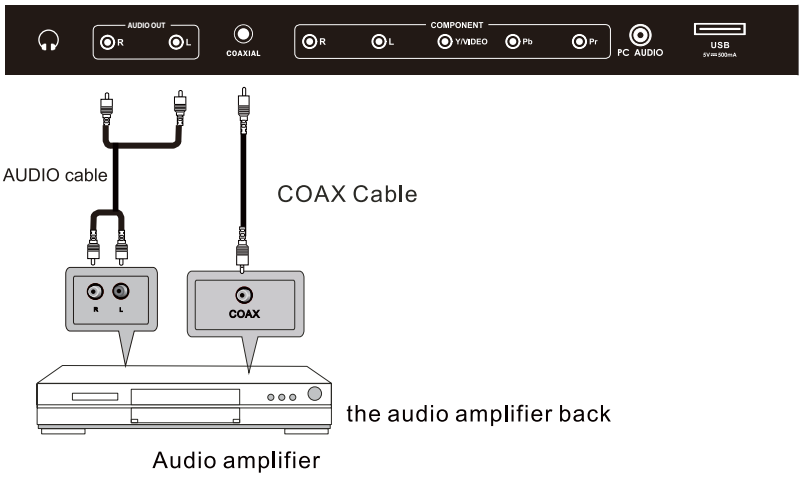

8. REMOTE CONTROL

Remote control instructions in TV mode

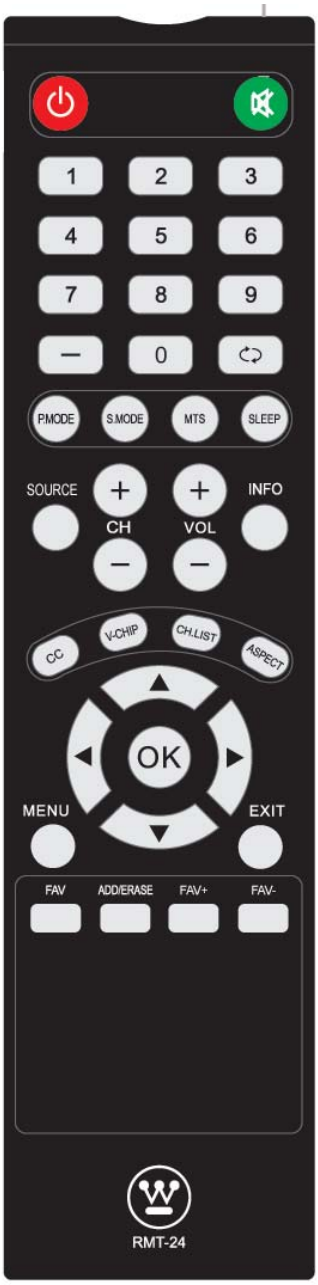

POWER Turn the LED TV on or off.

MUTE Press once to disable the audio and press again to enable the audio.

NUMBER BUTTONS Press 0-9 to directly change the TV channel.

– Press this button to enter a program number for multiple program channel such as 2-1,etc.

Return to the previous channel viewed.

P.MODE Select the picture mode.

S.MODE Select the sound mode.

MTS Press to adjust between available audio channel.

SLEEP Set the Sleep Timer

SOURCE Press Source to display the OSD input source, press ▲▼to select an input source, and then press **OK** to confirm

CH+/CH- Press to scan through channels.

VOL+/VOL- Press to increase / decrease the sound level.

INFO Displays the source and channel information

CC Press to set the closed caption.

V-CHIP Switch to V-CHIP input.

CH.LIST Press to display the TV program list.

ASPECT Press to select Aspect Ratio.

THUMBSTICK(▲/ ▼/◄ / ►/ OK)
Allows you to navigate the on-screen menus and adjust the system settings to your preference.

MENU Displays the main TV menu.

EXIT Exit the main TV menu.

FAV Press to diaplay the favourite program list.

ADD/ERASE Add/Erase channel to favourite program list.

FAV+ FAV-
Press these two keys to switch to your favourite programs.

Remote control setup

1. Open the cover.
2. Uses AAA size batteries. When inserting the batteries, make sure correct polarities “+”and “-” marks on the batteries line up correctly with compartment markings.
3. Replace the battery cover.

To prevent battery leakage which may result in bodily injury or damage to the remote:

1. Install all batteries correctly, and as marked on the remote control.
2. Do not mix batteries:(OLD and NEW or CARBON and ALKALINE, etc)
   Remove batteries when the remote is not used for a long period of time.

English

9.Menu Operation

SETUP WIZARD

Select Language

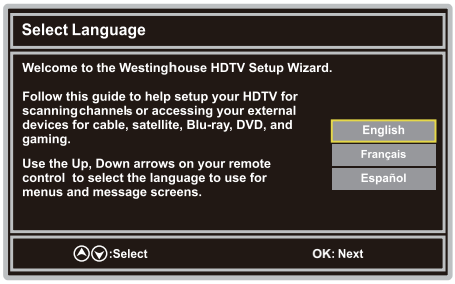
Select Language
Welcome to the Westinghouse HDTV Setup Wizard.
Follow this guide to help setup your HDTV for scanning channels or accessing your external devices for cable, satellite, Blu-ray, DVD, and gaming.
Use the Up, Down arrows on your remote control to select the language to use for menus and message screens.
English
Français
Español
:Select
OK: Next

Power On Mode

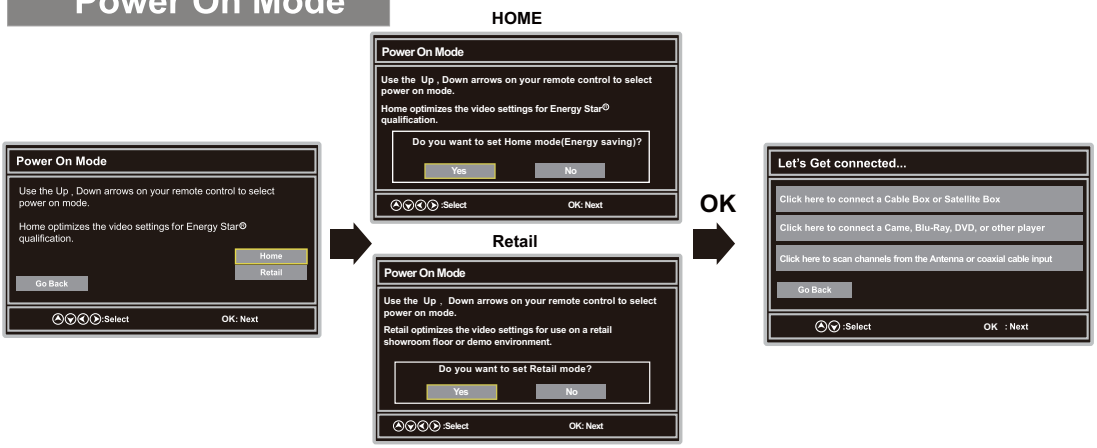
HOME
Power On Mode
Use the Up , Down arrows on your remote control to select power on mode.
Home optimizes the video settings for Energy Star© qualification.
Do you want to set Home mode(Energy saving)?
Yes
No
:Select
OK: Next
Power On Mode
Use the Up , Down arrows on your remote control to select power on mode.
Home optimizes the video settings for Energy Star© qualification.
Home
Retail
Go Back
:Select
OK: Next
Retail
Power On Mode
Use the Up , Down arrows on your remote control to select power on mode.
Retail optimizes the video settings for use on a retail showroom floor or demo environment.
Do you want to set Retail mode?
Yes
No
:Select
OK: Next
OK
Let's Get connected...
Click here to connect a Cable Box or Satellite Box
Click here to connect a Came, Blu-Ray, DVD, or other player
Click here to scan channels from the Antenna or coaxial cable input
Go Back
:Select
OK : Next

Home Mode (Energy Saving) : *Select Home Mode to maximize energy efficiency.Please note if you select Home Mode the picture will be darker. This mode meets the requirements of Energy Star® Qualification.*
Retail Mode : *Select Retail Mode if you would like your picture to be brighter. At times this mode may use more energy to operate the Volume/Sound Mode and the Picture Mode. In this setting, the power consumption may possibly exceed the limited requirement of the Energy Star® Qualification.*
Energy Star® *is a set of power-saving guidelines issued by the U.S. Environmental Protection Agency(EPA).*
Energy Star® *is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.*

The ON-MODE Power under Home Mode should be less than 78.8 W.
The SLEEP-MODE Power should be less than 0.5 W.

English

Channel Scan

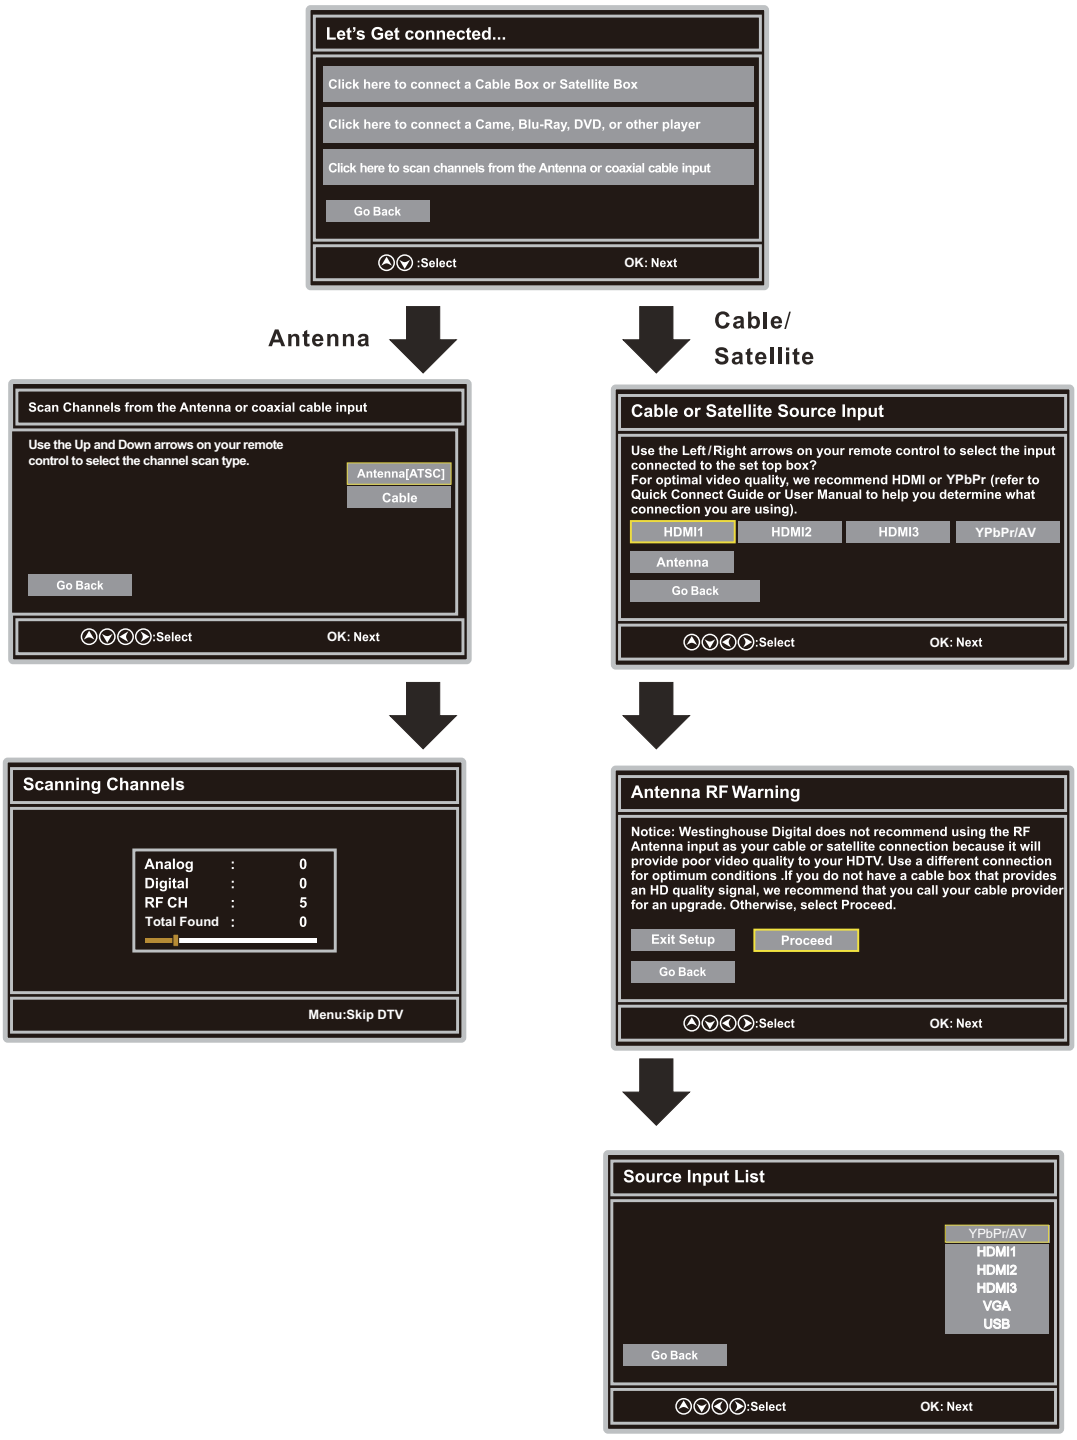
Let's Get connected...
Click here to connect a Cable Box or Satellite Box
Click here to connect a Came, Blu-Ray, DVD, or other player
Click here to scan channels from the Antenna or coaxial cable input
Go Back
:Select
OK: Next
Antenna
Cable/
Satellite
Scan Channels from the Antenna or coaxial cable input
Use the Up and Down arrows on your remote control to select the channel scan type.
Antenna[ATSC]
Cable
Go Back
:Select
OK: Next
Cable or Satellite Source Input
Use the Left/Right arrows on your remote control to select the input connected to the set top box?
For optimal video quality, we recommend HDMI or YPbPr (refer to Quick Connect Guide or User Manual to help you determine what connection you are using).
HDMI1
HDMI2
HDMI3
YPbPr/AV
Antenna
Go Back
:Select
OK: Next
Scanning Channels
Analog : 0
Digital : 0
RF CH : 5
Total Found : 0
Menu:Skip DTV
Antenna RF Warning
Notice: Westinghouse Digital does not recommend using the RF Antenna input as your cable or satellite connection because it will provide poor video quality to your HDTV. Use a different connection for optimum conditions .If you do not have a cable box that provides an HD quality signal, we recommend that you call your cable provider for an upgrade. Otherwise, select Proceed.
Exit Setup
Proceed
Go Back
:Select
OK: Next
Source Input List
YPbPr/AV
HDMI1
HDMI2
HDMI3
VGA
USB
Go Back
:Select
OK: Next

Select Input Source

- Press **SOURCE** button to display the input source list.
- Press ▼/▲ button to select the input source you want to watch.
- Press **OK** button to enter the selected source.

Basic Operation

- Press MENU button to display the MAIN OSD MENU.
- Press ◄/► button to select the MENU you want.
- Press **OK** button to enter the sub menu.
- Press ▼/▲ button to select the option and then press ◄/► to adjust the value in the sub menu.
- You can press MENU button to go back to the upper menu or EXIT button to close the OSD.

For TV Mode:

PICTURE Menu

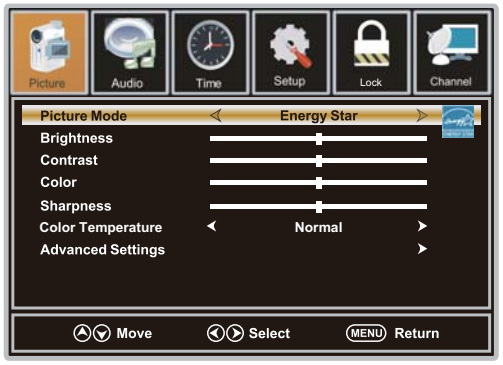

1.Press ◄/► button to select **Picture** in the main menu.
2.Press ▼/▲ button to select the option that you want to adjust in the Picture menu.
3.Press ◄/► button to desired level.
4.When you have changed the settings, you can exit from the menu by pressing MENU.

Picture Mode
Press ▼/▲ button to select Picture Mode, then press ◄/► button to adjust.
Available picture mode: Energy Star, Retail, Movie, User.

Brightness
Press ▼/▲ button to select Brightness, then press ◄/► button to adjust.

Contrast
Press ▼/▲ button to select Contrast, then press ◄/► button to adjust.

Color
Press ▼/▲ button to select Color, then press ◄/► button to adjust.

Sharpness
Press ▼/▲ button to select Sharpness, then press ◄/► button to adjust.

Color Temperature
Press ▼/▲ button to select Color Temperature ,then press◄/►button to adjust.
Available color Temp. mode:Warm,Cool,Normal.

Advanced Settings

Press ▼/▲ button to select Advanced Settings, then press **OK** button to enter.
Adjust advanced video features to fine tune the picture.

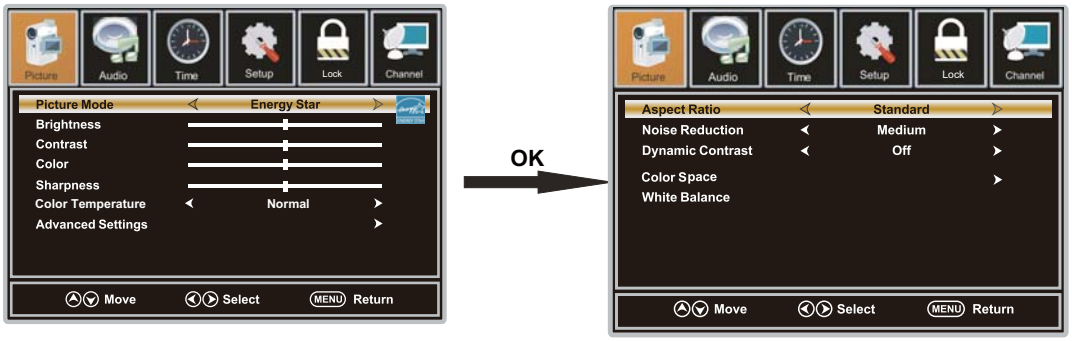

Aspect Ratio

Press ▼/▲ button to select Aspect Ratio, then press ◄/► button to adjust. Available Aspect Ratio: Standard, Fill, Over Scan.

Noise Reduction

Press ▼/▲ button to select the item Noise Reduction, then press ◄/► button to adjust. Available Noise Reduction: Off,Weak,Medium,Strong.

Dynamic Contrast

Press ▼/▲ button to select Dynamic Contrast, then press ◄/► button to adjust On or Off. It can adjust the contrast corresponding to the input signal in order to improve the picture quality displayed.

Color Space

Press ▼/▲ button to select Color Space, then press **OK** button to enter.

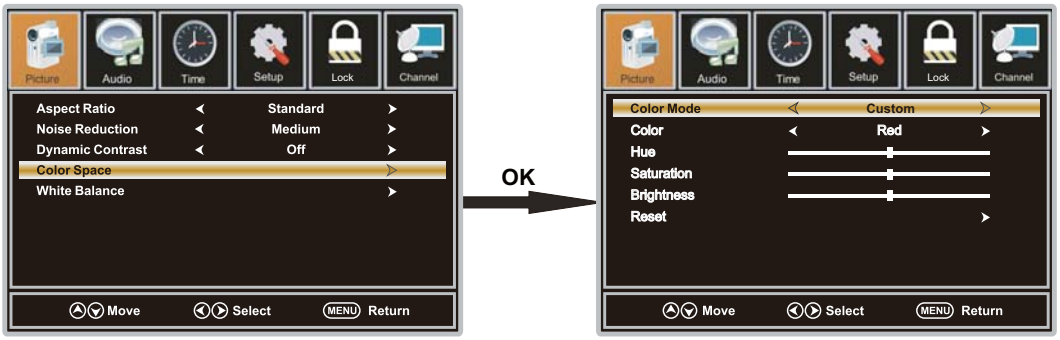

MENU OPERATION

Color Mode

Press ▼/▲ button to select Color Mode, then press ◄/► button to adjust. Available Color Mode: Auto, Native, Custom.

Color

Press ▼/▲ button to select Color , then press ◄/► button to adjust. Available Color Mode: Red, Green, Blue, Yellow, Cyan, Magenta.(It is available in Custom mode.)

Hue

Press ▼/▲ button to select Hue, then press ◄/► button to adjust.(It is available in Custom mode.)

Saturation

Press ▼/▲ button to select Saturation, then press ◄/► button to adjust.(It is available in Custom mode.)

Brightness

Press ▼/▲ button to select Brightness, then press ◄/► button to adjust.(It is available in Custom mode.)

Reset

Press ▼/▲ button to select Reset, Press **OK** to enter, then press ◄/► button to select No or Yes.

White Balance

Press ▼/▲ button to select White Balance, then press **OK** button to enter.

Press ▼/▲ button to select the option you want ,then press ◄/► button to adjust.

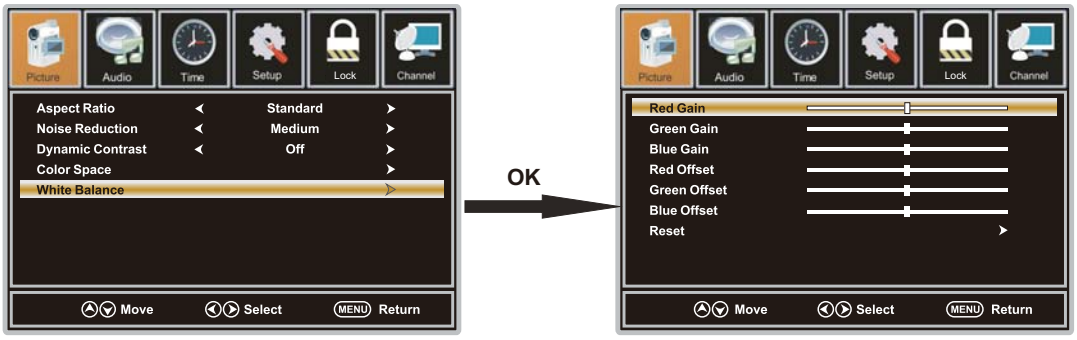

AUDIO Menu

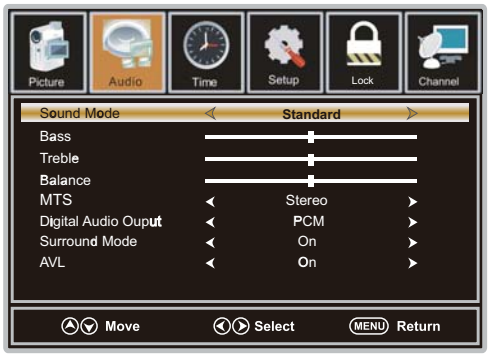

1.Press ◄/► button to select **Audio** in the main menu.
2.Press ▼/▲ button to select the option that you want to adjust in the Audio menu.
3.Press ◄/► button to desired level.
4.When you have changed the settings, you can exit from the menu by pressing MENU.

Sound Mode
Press ▼/▲ button to select the item Sound Mode , then press ◄/► button to select the desired mode. Available Sound Mode : Sports, User, Standard, Music, Movie. Select a sound mode to achieve ideal sound.

Bass
Press ▼/▲ button to select Bass, then press ◄/► button to adjust.

Treble
Press ▼/▲ button to select Treble , then press ◄/► button to adjust.

Balance
Press ▼/▲ button to select Balance, then press ◄/► button to adjust.

MTS
Press ▼/▲ button to select MTS , then press ◄/► button to adjust.

Digital Audio Output
Press ▼/▲ button to select the item Digital Audio Output, then press ◄/► button to select the desired digital audio output. Available digital audio output: PCM, Raw and Off .

Surround Mode
Press ▼/▲ button to select the item Surround Mode , then press ◄/► button to select On or Off.

AVL
Press ▼/▲ button to select the item AVL, then press ◄/► button to select On or Off. Auto Volume Level can set the volume automatically adjust corresponding to the input audio.

TIME Menu

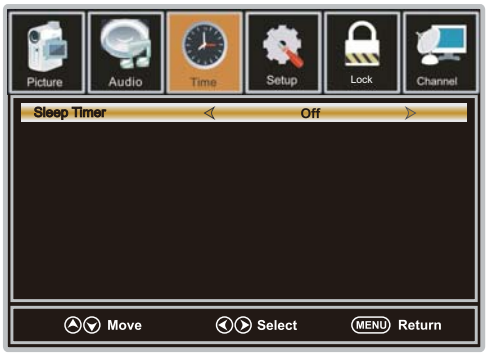

1.Press ◄/► button to select **Time** in the main menu.
2.Press ▼/▲ button to select the option that you want to adjust in the Time menu.
3.Press ◄/► button to desired level.
4.When you have changed the settings, you can exit from the menu by pressing MENU.

Sleep Timer
Press ▼/▲ button to select Sleep Timer, then press ◄/► button to set.
Available Sleep Timer: Off, 5Min, 10Min, 15Min, 30Min, 60Min, 90Min, 120Min, 180Min, 240Min.

SETUP Menu

1.Press ◄/► button to select **Setup** in the main menu.
2.Press ▼/▲ button to select the option that you want to adjust in the Setup menu.
3.Press ◄/► button to desired level.
4.When you have changed the settings, you can exit from the menu by pressing MENU.

Menu Language

Press ▼/▲ button to select the item Menu Language, then press ◄/► button to adjust.
Available Language: English, French, Spanish.

OSD Timeout

Press ▼/▲ button to select OSD Timeout , then press ◄/► button to set.
Available OSD Timeout: 5Sec., 15Sec., 30Sec., 45Sec., 60Sec..

Closed Caption

Press ▼/▲ button to select Closed Caption, then press **OK** button to enter.

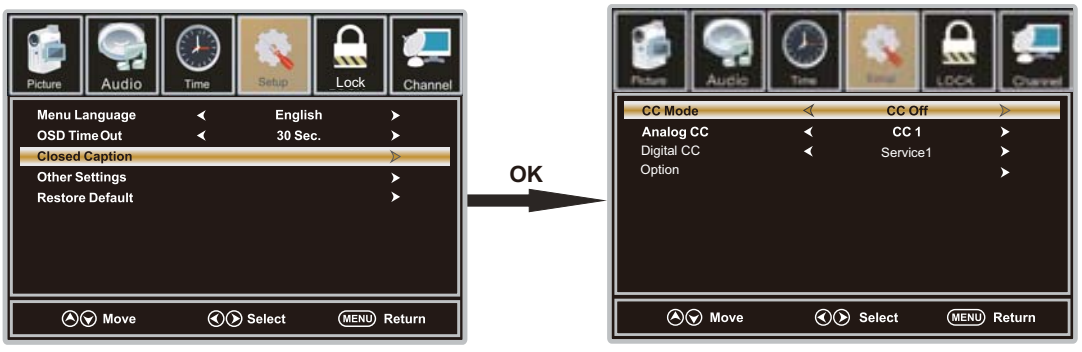

CC Mode

Press ▼/▲ button to select CC Mode, then press ◄/► button to select CC Off , CC On, CC on Mute.

Analog CC

Press ▼/▲ button to select Analog CC, then press ◄/► button to select.

Available Analog CC: CC1, CC2, CC3, CC4, Text1, Text2, Text3, Text4.

Digtial CC

Press▼/▲ button to select Advance Selection,then press ◄/► button to select Service1,Service2 Service3,Service4,Service5,Service6,off.

Option

Press▼/▲ button to select Option,then press ► button enter submenu.

Other Settings

Press ▼/▲ button to select Other Settings, then press **OK** button to enter.

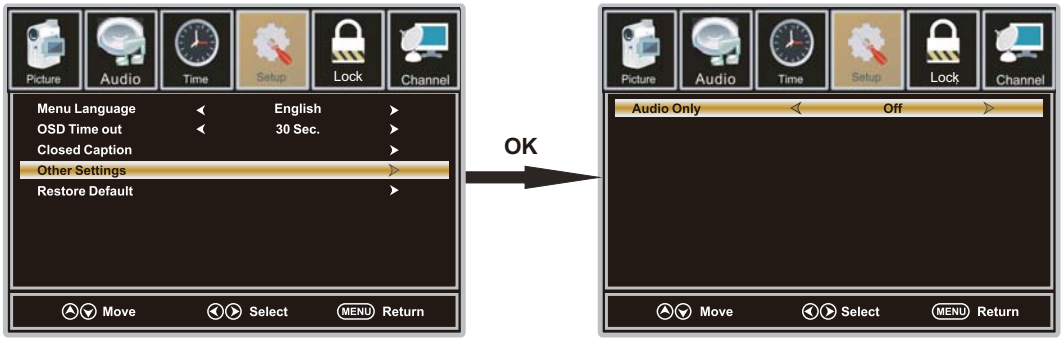

Audio Only

Press ▼/▲ button to select Audio Only, then press ◄/► button to set On or Off.

Restore Default

Press ▼/▲ button to select Restore Default

Change power on options or reset TV to factory default.(0000)

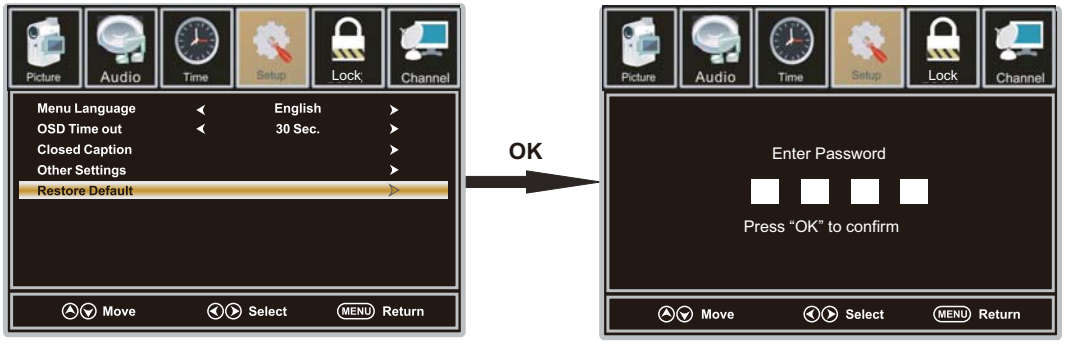

LOCK Menu

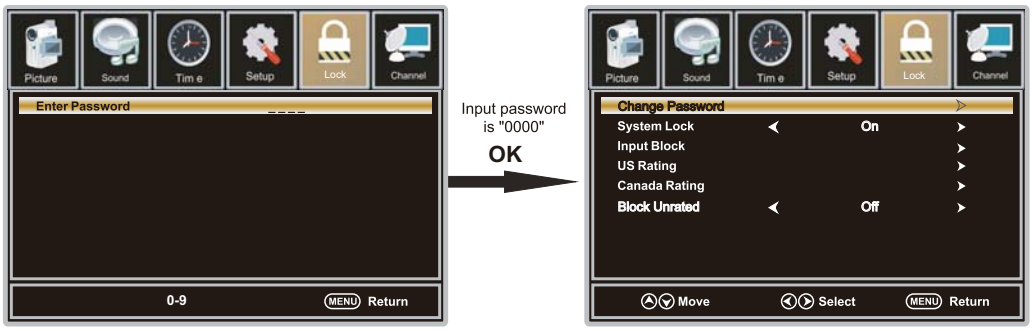

1.Press ◄/► button to select **Lock** in the main menu.
2.Press ▼/▲ button to select the option that you want to adjust in the Lock menu.
3.Press ◄/► button to desired level.
4.When you have changed the settings,you can exit from the menu by pressing MENU.
Input password to enter,default password is “0000".

Change Password

Press ▼/▲ button to select Change Password, then press **OK** button to adjust the value.
a sub menu will appear as below. If the password is changed, all of the passwords in the menu will be changed at the same time.

Note: If you forget your password, you can use “8899” to enter any menu locked.

System Lock

Press ▼/▲ button to select System Lock, then press ◄/► button to set On or Off.
Only available when “System Lock”is “On”.

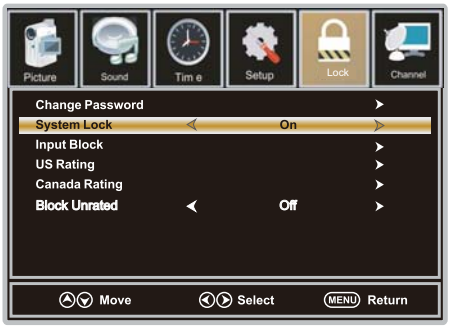

English

Input Block

Press ▼/▲ button to select Input Block, then press ◄/► button to enter.
Press ◄/► button to select Unblock or Block the input sources.

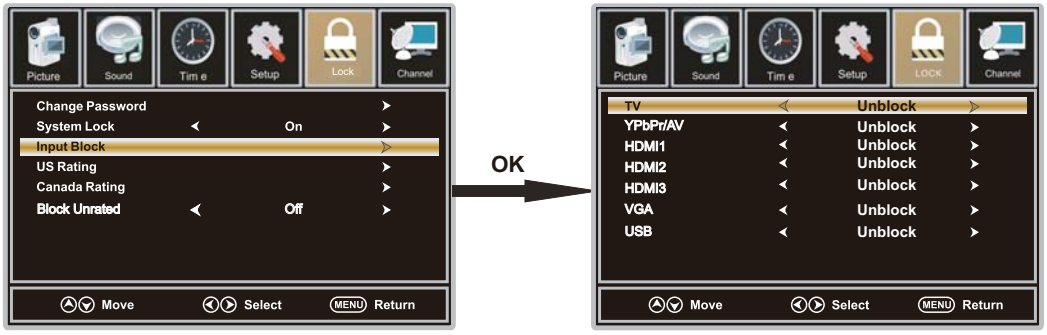

US Rating

Press ▼/▲ button to select US Rating, then press ◄/► button to enter. A sub menu will appear as below.
The TV rating composes of two aspects: age-based and content -based.
This system defines the rating control which comes from MPAA rules.

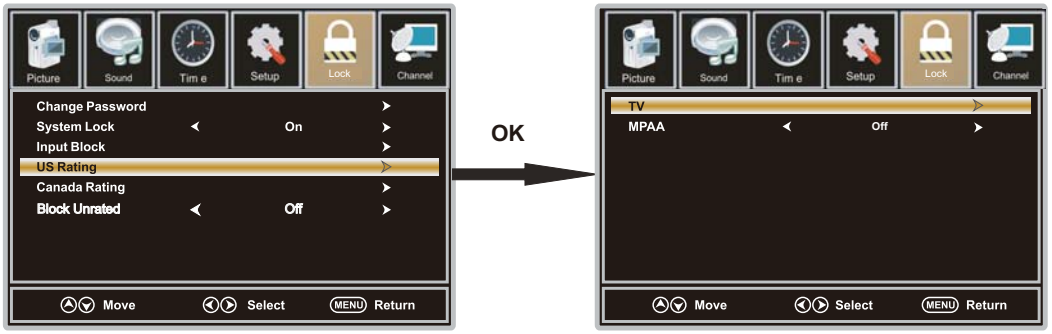

Canada Rating

Press ▼/▲ button to select Canada Rating, then press ◄/► button to enter. Press ◄/► button to select.

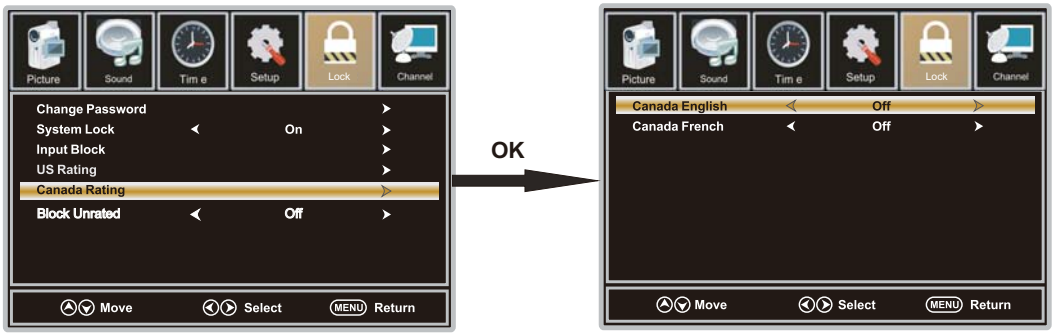

Canada English
Press ▼/▲ button to select Canada English, then press ◄/► button to set.
Available Canada English: Off, C, C8+,G, PG, 14+,18+.

Canada French
Press ▼/▲ button to select Canada French, then press ◄/► button to set.
Available Canada French: Off, G, 8ans+, 13ans+, 16ans+, 18ans+.

CHANNEL Menu

Note:This menu is only shown when the input source is TV.

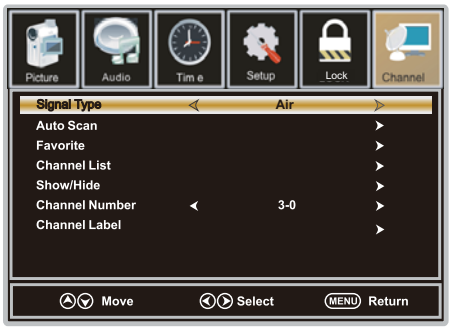

1.Press ◄/► button to select **Channel** in the main menu.
2.Press ▼/▲ button to select the option that you want to adjust in the Channel menu.
3.Press ◄/► button to desired level.
4.When you have changed the settings, you can exit from the menu by pressing MENU.

Signal Type
Press ▼/▲ button to select Signal Type , then press ◄/► button to set. Available Signal Type :Air, Cable.

Auto Scan
Press ▼/▲ button to select Auto Scan, then press **OK** button to search channel.
A Channel Search Menu will appear as below.

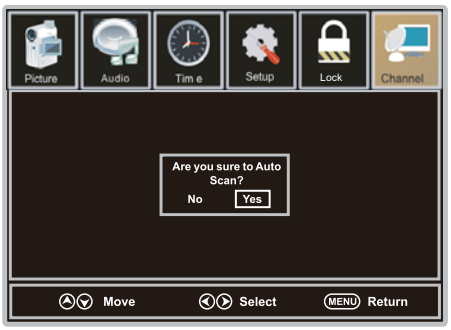

Favorite
Press ▼/▲ button to select Favorite, then press **OK** button to scan the Favorite channel list.

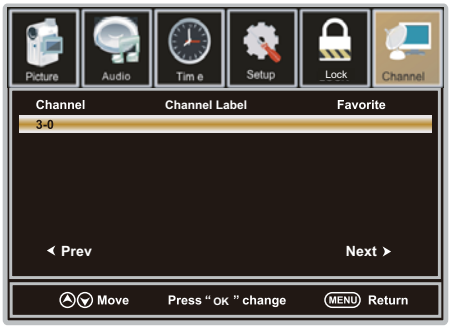

Channel List

Press ▼/▲ button to select Channel List, then press **OK** button to scan the Channel List.

Show/Hide

Press ▼/▲ button to select Show, then press **OK** button to enter .

Show or hide the channels in your program list.

Channel Number

Press ▼/▲ button to select Channel Number, then press ◄/► button to adjust.

Channel Label

Press ▼/▲ button to select Channel Label, then press **OK** button to enter.

Create labels for channels, up to 7 characters.

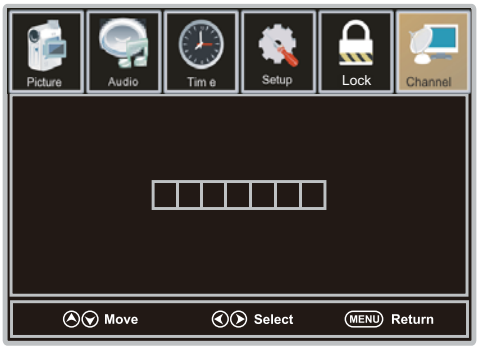

SETUP Menu

For VGA Mode:

1.Press ◄/► button to select **Setup** in the main menu.
2.Press ▼/▲ button to select VGA Settings, then press **OK** button to enter.
A sub menu will appear as below.

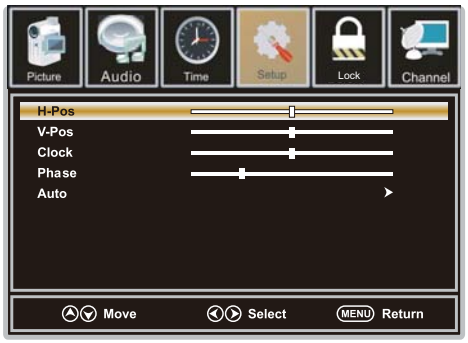

H-Pos
Press ▼/▲ button to select H-Pos, then press ◄/► button to adjust.

V-Pos
Press ▼/▲ button to select V-Pos, then press ◄/► button to adjust.

Clock
Press ▼/▲ button to select Clock, then press ◄/► button to adjust.

Phase
Press ▼/▲ button to select Phase, then press ◄/► button to adjust.

Auto
Press ▼/▲ button to select Auto, then press **OK** button to enter.
Adjust to the PC signal timing automatically.

1. PICTURE menu and description are the same as that for TV mode.
2. Audio Language in AUDIO menu is invalid.
3. TIME menu and description are the same as that for TV mode.
4.Close Caption in SETUP menu is invalid.
5.US, Canada, RRT Setting and Reset RRT in LOCK menu is invalid
6.PC mode has no CHANNEL menu.

Note: The operation and description of the hot key are programmable on your remote control.

USB Menu

Note:Before operating Media menu,Plug in USB device,then press SOURCE button to set the Input Source to USB.
Press ▲/▼ button to select USB in the Source menu,then press OK button to enter.

Press ◄ / ► button to select the option you want to adjust in the main Media menu,then press OK button to enter.

JPEG Menu

Press ◄ / ► button to select JPEG in the main menu,then press OK button to enter.
Press Exit button to return back to the previous menu.

Press ◄ / ► button to select drive disk you want to watch,then press OK button to enter.
Press ◄ / ► button to select Return option to go back to the previous menu.

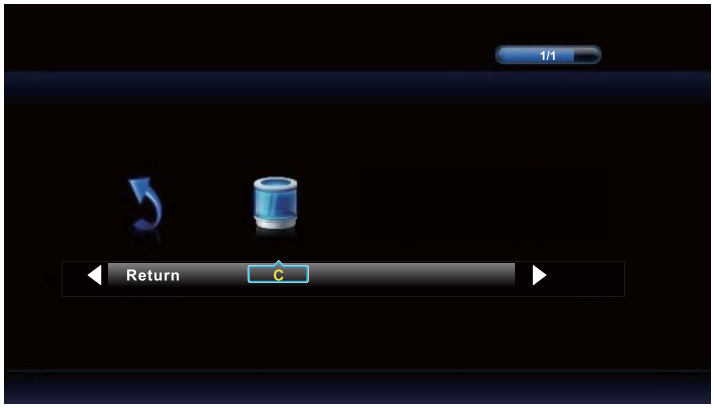

Press ◄ / ► button to select the file you want to watch in the file selecting menu,then press OK button to display picture.
When highlighting the option you select,the file information will appear on the right and Picture will be previewed in the center.

M-JPEG Menu

Press ◄ / ► button to select M-JPEG in the main menu,then press OK button to enter.
Press EXIT button to return back to the previous menu.

Press ◄ / ► button to select drive disk you want to watch,then press OK button to enter.
Press ◄ / ► button to select Return option to go back to the previous menu.

When highlighting the option you select,the file information will appear on the right and Movie will be previewed in the center.

Press OK button to play the selected movie.
Press display button to show select menu in the bottom.
Press ◄ / ► button to select menu in the bottom you want to run,then press OK button to operate.

10. Troubleshooting

Please check if you can solve problems by troubleshooting yourself.

Troubleshooting	Control
No signal	Please check that all cables are correctly plugged in.
No color shades	Adjust the contrast, the color and the brightness.
Stain on the screen	May be the result from a lighting signal from car, motor, neon light and other electrical devices or appliances.
Double or multiple display image	May be the result of an electrical wave disturb from other TV, Computer and Game machine or Radio.
Snow on the screen	The cables of the antenna are not correctly plugged in.
The remote control does not work	Please check the batteries order and alignment. Check that the IR of the remote control is not hidden by something.
"Zip" made noise on TV cover	Even if the display image is correct, the noise may come from an unsteady fixation of the panel.
No sound	Make sure that you have not press the MUTE button of the remote control.

11. SPECIFICATIONS

This manual is only for your reference, any change to the design and specification will not be advised.

Screen Size		47.6 Inch
Display Type		TFT LED
Resolution(Pixel)		1920x1080
Aspect Ratio		16:9
Power Supply		AC100-240V 50/60Hz
Power Consumption		120 W
TV System		ATSC/NTSC
Video Input Format		PAL/NTSC
Audio Output Power		L / R 2X8W
SUPPORT	ANTENNA	YES
	AV-IN	YES
	YPbPr - IN	YES
	HDMI - IN	YES
	VGA(PC) - IN	YES
	VGA(PC) AUDIO - IN	YES
	SCART - IN	--
	SCART - OUT	--
	HEADPHONE - OUT	YES
	S-VIDEO - IN	--
	COAXIAL - OUT	YES
	AUDIO - OUT	YES
	COMMON INTERFACE	--
	USB	JPEG, M-JPEG
	IPOD	--
DVD	Disc Physical Format	--
	DVDVideoOutputFormat	--
Dimensions	Inc Stand (LxWxHmm)	1097 x 257 x 711 mm
	Exc Sand (LxWxHmm)	1097 x 90 x 644 mm
Weight	Net (Kgs)	13
	Gross (Kgs)	19.5

www.westinghousedigital.com

S/N: _____

Westinghouse Digital, LLC
Orange, CA

SE-UM-4802-1301